




■ Temperature / light sensor installation requirements and guidelines

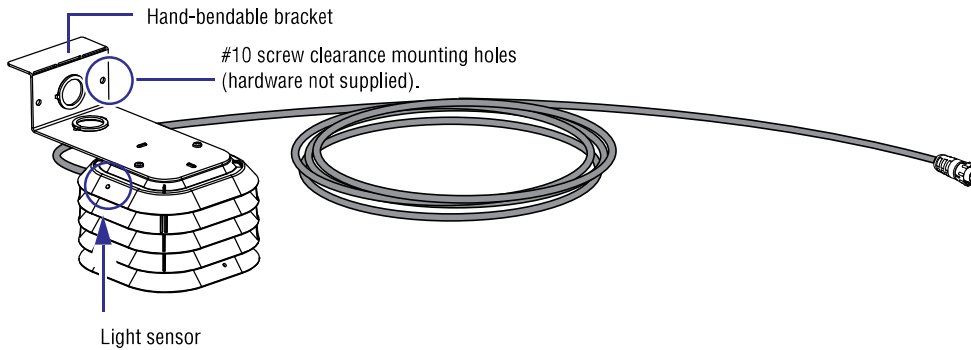

Installation requirements

Notice: Failure to follow the temperature / light sensor install requirements may cause intermittent or inaccurate operation and will not be covered by the warranty.

- Vents on temperature / light sensor must point downward.
- Do NOT attach temperature / light sensor directly to the sign.
- Do NOT install near sprinklers or water fountains.