

AlphaVision™ PC Series III 320x80 and 320x96 Signs


1 Open the side of the sign labeled “CONTROLLER SIDE”.

WARNING! Hazardous voltage. Contact with high voltage may cause death or serious injury. Always disconnect power to unit prior to servicing. Possible fall or crush hazard. Remain clear of door when opening.

- A. Disconnect all power from the sign at the power source.
- B. Turn the controller-side panel latches counter-clockwise and carefully raise both panels.

ADAPTIVE
800-719-2838
AVPC320096T3 - DS - WCE - X
SN: EN0001127
↓ CONTROLLER SIDE ↓

Open the panel identified as CONTROLLER SIDE on this label, attached to the bottom of the sign.

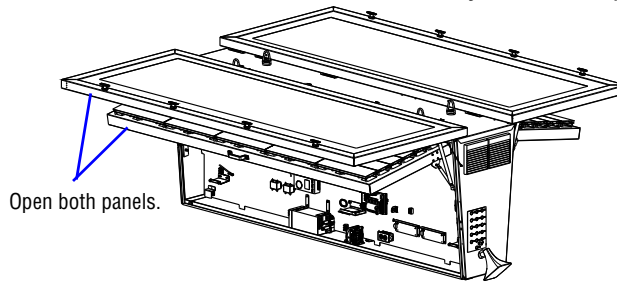


Support the weight of both panels.

Do not allow panels to swing open freely.

2 Connect the sign and messaging computer to an Ethernet network.

- A. Run Category 5 T568A or T568B wire from the network into the sign communications conduit. (Communications conduit is labeled Ethernet and is located on the side of the sign).
- B. Position the wires into the channels on the modular network adapter (see diagram) and use a 110 punch-down tool to push the wires into the channels.

NOTE: Do not separate the twisted pairs more than 0.5 inches from the termination point.

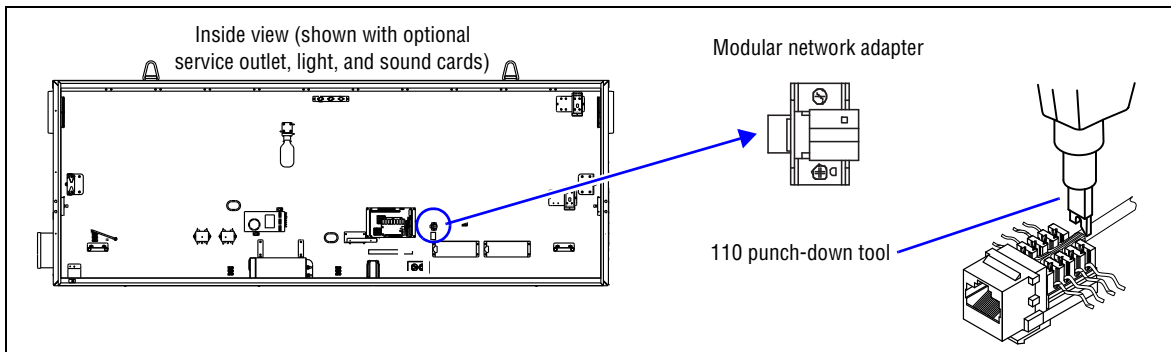

Category 5 T568A (8 wire)		Category 5 T568B (8 wire)		Position wires into channels on the modular network adapter as shown below.
110 type connector	RJ45 jack	110 type connector	RJ45 jack	
Wht/Blu	5	Wht/Blu	5	
Blu/Wht	4	Blu/Wht	4	
Wht/Org	3	Wht/Org	1	
Org/Wht	6	Org/Wht	2	
Wht/Grn	1	Wht/Grn	3	
Grn/Wht	2	Grn/Wht	6	
Wht/Brn	7	Wht/Brn	7	
Brn/Wht	8	Brn/Wht	8	

3

If applicable, connect sign to KVM extender, USB extender and/or remote reset button (DB25).

To connect the sign to the KVM extender:


- Route Category 5 T568A cable (with RJ45 connector) from the control station into the sign communications conduit (maximum length: 70 meters/230 feet).
- Connect the cable to the KVM transmitter.
- Attach the KVM transmitter to the appropriate connectors on the CPU interface bracket.

To connect the sign to the USB extender:

- Route USB cable from the control station to the sign communication conduit.
- Connect the cable to the appropriate connector on the USB bracket.

To connect the sign to the remote reset button:

- Route 16AW6 wire from the control station to the sign communication conduit.
- Strip wires 1/2" and connect to the reset terminal block on the CPU interface bracket.

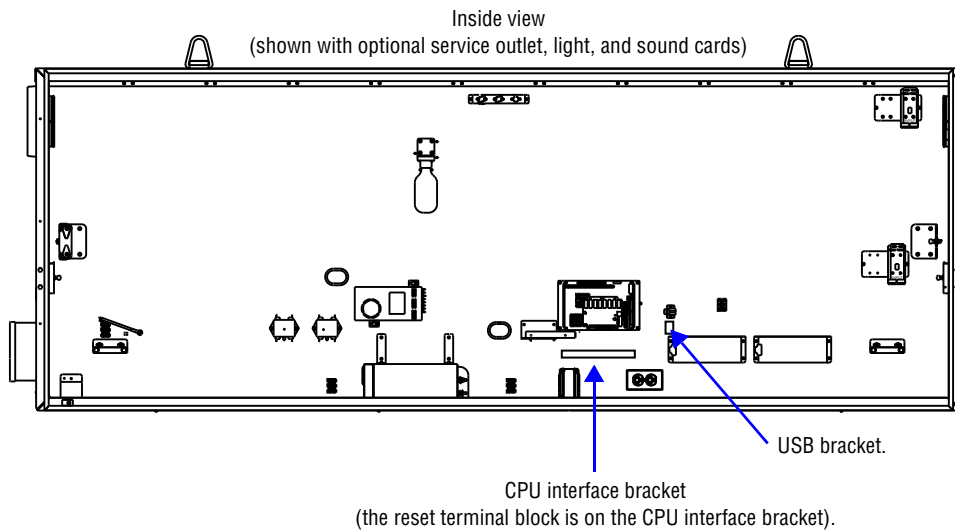



4

If applicable, connect the speakers to the Tune Blaster sound cards.


Each sound card channel supports up to 2 speakers. Each speaker should be 8 ohms and at least 10 watts.

- For each speaker, insert one non-metallic, compression type connector into a speaker conduit.
- Run speaker wire (Belden 8471 or equivalent) from each speaker through the connector to the sound card inside the sign.
- Connect the wires to the sound card using a #1 screwdriver (1/16" wide tip) to depress the spring clip and insert the speaker wire.
- Repeat steps A, B, and C for an additional Tune Blaster sound card, if applicable.

Inside view (shown with optional service outlet and sound cards)

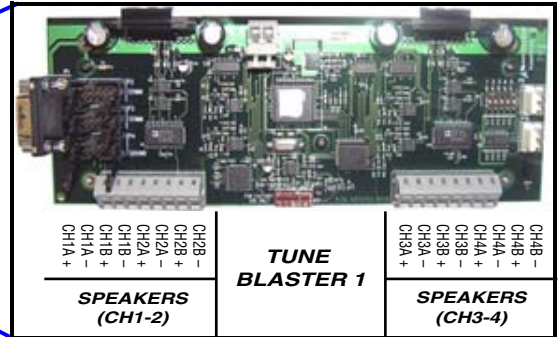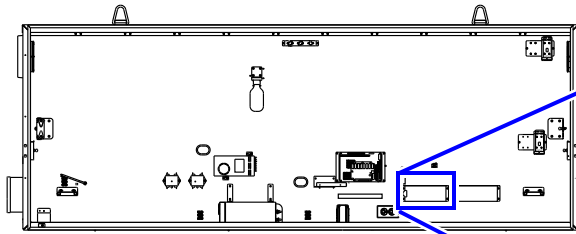

Sign side view

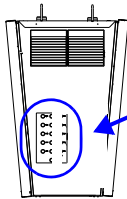

Speaker conduit openings are located on the side of the sign. Each opening has a diameter of 5/8-inch.

5

Close the sign.

WARNING! Possible crush hazard. Remain clear of door when closing.

Carefully lower both panels and turn the latches on the outside panel clockwise to secure panels to sign.

6

 
Connect power to the sign.

WARNING! Hazardous voltage. Contact with high voltage may cause death or serious injury. Always disconnect power to unit prior to servicing.

Make sure power is **not** applied at the power source and the sign is **not** connected to a ground fault interrupt (GFI) circuit. The sign must be properly earth-grounded according to local and national electrical codes.

- Run one single phase 120VAC/60Hz line into the power conduit on the side of the sign with the disconnect box.
- Open the disconnect box and connect the wires to the fuse terminals. (See diagram).
- Close the disconnect box. Apply 120VAC/60Hz power at the power source and move the disconnect switch to the ON position.
- Confirm that the neon green indicator light is lit, indicating that power is supplied to the sign.

Disconnect box




Indicator light

Hot (Line)

Disconnect Switch

Disconnect box - inside view

Ground

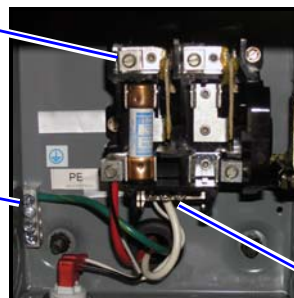

Neutral

MODELS		Voltage	Full Load Amps
320x80	Single-Sided	115V	9.0 amps*
	Double-Sided	115V	15.0 amps*
320x96	Single-Sided	115V	10.0 amps*
	Double-Sided	115V	17.0 amps*

* Add 10 amps for units containing optional AC outlet.

THIS PAGE INTENTIONALLY BLANK