



NOTE: This guide applies to Type B signs that are 43.7 inches tall. Older Type B signs are 50.75 inches tall and are documented in part number 9712-7001B.

1 Open the side of the sign labeled "CONTROLLER SIDE".

- Disconnect all power from the sign at the power source to prevent electrical injury or damage.
- Turn the controller-side panel latches counter-clockwise. Carefully raise the panel of the sign.

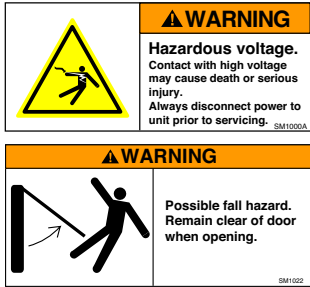


Open the panel identified as CONTROLLER SIDE on this label, attached to the bottom of the sign.

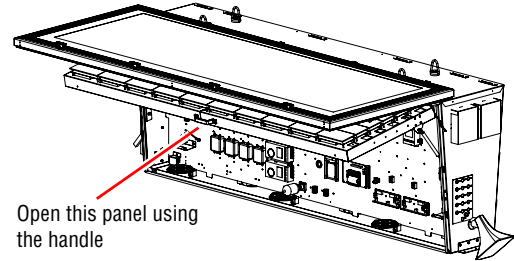

2 Connect the sign and messaging computer to an Ethernet network.

- Run Category 5 T568A or T568B wire from the network into the sign communications conduit.
- Position the wires into the channels on the modular network adapter (see below).
- Use a 110 punch-down tool to push the wires into the channels.
- Do not separate the twisted pairs more than 0.5 inches from the termination point.

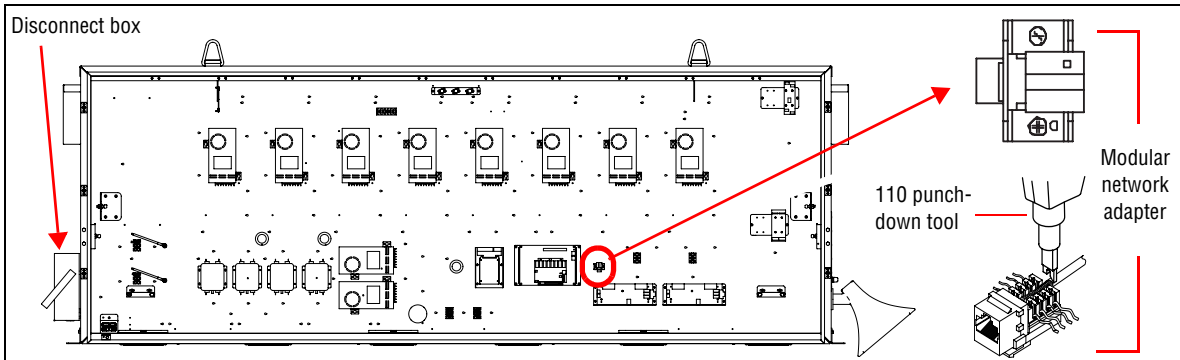

Category 5 T568A (8 wire)		Category 5 T568B (8 wire)		Position the wires into the channels on the modular network adapter as shown below.
110 type connector	RJ45 jack	110 type connector	RJ45 jack	
Wht/Blu	5	Wht/Blu	5	
Blu/Wht	4	Blu/Wht	4	
Wht/Org	3	Wht/Org	1	
Org/Wht	6	Org/Wht	2	
Wht/Grn	1	Wht/Grn	3	
Grn/Wht	2	Grn/Wht	6	
Wht/Brn	7	Wht/Brn	7	
Brn/Wht	8	Brn/Wht	8	

© Copyright 2004-2005 Adaptive Micro Systems LLC. All rights reserved.

Adaptive Micro Systems • 7840 North 86th Street • Milwaukee, WI 53224 USA • 414-357-2020 • 414-357-2029 (fax) • <http://www.adaptivedisplays.com>

Trademarked names appear throughout this document. Rather than list the names and entities that own the trademarks or insert a trademark symbol with each mention of the trademarked name, the publisher states that it is using names for editorial purposes and to the benefit of the trademark owner with no intention of improperly using the trademark.

The following are trademarks of Adaptive Micro Systems: Adaptive, Alpha, AlphaLert, AlphaNET, AlphaNet plus, AlphaEclipse, AlphaPremiere, AlphaTicker, AlphaVision, AlphaVision InfoTracker, Automode, BetaBrite, BetaBrite Director, BetaBrite Messaging Software, Big Dot, Director, EZ KEY II, EZ95, PagerNET, PPD, PrintPak, Serial Clock, Smart Alec, Solar, TimeNet

The distinctive trade dress of this product is a trademark claimed by Adaptive Micro Systems LLC. Due to continuing product innovation, specifications in this manual are subject to change without notice.

3

If applicable, connect the speakers to the Tune Blaster sound cards.

- A sign may have up to 16 speakers. Each speaker should be 8 ohms and at least 10 watts.
- For each speaker, insert one non-metallic, compression type connector into a speaker conduit.
- Run speaker wire (Belden 8471 or equivalent) from each speaker through the connector to the sound card inside the sign.
- Connect the wires to the sound card using a #1 screwdriver (1/16" wide tip) to depress the spring clip and insert the speaker wire.

Factory-installed sound card

Optional sound card

Each sign can support up to 16 speakers.
There are 8 channels with two speakers (A and B) per channel.

Speaker conduits on the side of the sign

Each opening is 0.625" in diameter.

Dimensions: 10" vertical spacing, 2" horizontal spacing, 1" offset.

Inside a sign

4

Close the sign.

- Carefully lower the panel.
- Turn the latches on the panel clockwise.

WARNING

Possible fall hazard. Remain clear of door when opening.

SM1002

5

Connect power to the sign.

- Make sure that power is *not* applied at the power source.
- This sign should *not* be connected to a ground fault interrupt (GFI) circuit.
- Open the disconnect box.
- Run two 120VAC lines into the power conduit on the side of the sign with the disconnect box.
- Connect the wires as shown below. Do not remove the yellow wires as they provide power to the fluorescent lighting circuit. The fluorescent service light is powered, even when the disconnect box is open. The sign must be properly earth grounded.
- Close the disconnect box. Apply 120VAC power at the power source. Then move the switch on the disconnect box up to the ON position.
- Confirm that the green indicator lights are lit, indicating that power is supplied to the sign.

WARNING

Hazardous voltage. Contact with high voltage may cause death or serious injury. Always disconnect power to unit prior to servicing. SM1000A

AVERTISSEMENT

COURANT DE FUITE ELEVÉ. Raccordement à la terre indispensable avant le raccordement au réseau.

WARNING

HIGH LEAKAGE CURRENT. Earth connection essential before connecting supply. SM1009A

Side view

Disconnect box

On/off switch

Green indicator lights